



350 S. St. Charles St. Jasper, In. 47546  
Ph. 812.482.2932 Fax 812.634.6632  
[www.ridetech.com](http://www.ridetech.com)

**Part # 11371499**  
**88-98 C1500 Front Lower StrongArms**  
For Use w/ CoolRide

**Components:**

1	90000439	Driver side lower arm
1	90000440	Passenger side lower arm
2	90000897	Ball joints
8	90001085	Poly bushing half
2	90000198	Inner bushing sleeve – 3" long
1	90000199	Inner bushing sleeve – 3.5" long
1	9001092	Tube of Lithium grease


## Installation Instructions



1. After removing the factory lower control arm, clean the bushing mounting surfaces on the frame and lubricate with the lithium grease supplied.

2. Fasten the lower arm to the frame using the factory hardware.

**Note:** On some trucks the frame brackets may be pinched and will need to be spread back apart to allow bushing to slide in.

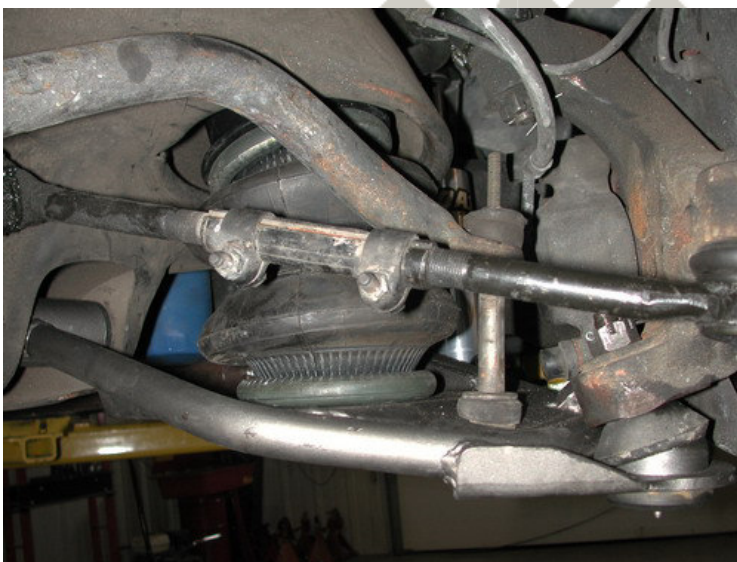

3. Slide the ball joint boot over the stud, then push the stud up through the spindle. Secure w/ the new castle nut and cotter pin supplied.

4. Attach to the air spring & shock to the lower arm using the hardware supplied w/ those kits.

5. Screw the Zerk fitting into the ball joint and grease.

## 88-98 C-1500 CoolRide Driver Side StrongArm

Item #	Description	Qty.
1.	Driver side arm	1
2.	Ball joint	1
3.	Poly bushing half	4
4.	Inner bushing sleeve – 3"	1
5.	Inner bushing sleeve – 3.5"	1
6.	Grease fitting	2

