



350 S. St. Charles St. Jasper, In. 47546
Ph. 812.482.2932 Fax 812.634.6632
www.ridetech.com

Part # 11391499
82-03 S-10 Lower Strong Arms
For Use w/ CoolRide

Components:

1	90000655	Driver side lower arm
1	90000656	Passenger side lower arm
2	90000896	Ball joint (includes boot, grease fitting, castle nut & cotter pin)
2	90000516	Inner bushing sleeve – 2.375” long
2	90001094	Inner bushing sleeve - 3” long
4	90001085	Poly bushing half
4	90001089	Poly bushing half
4	99250001	¼”-28 grease fitting – Use Lithium grease on frame bushings


STRONGARMS™

by Air Ride Technologies

Installation Instructions



1. After removing the factory lower control arm, clean the bushing mounting surfaces on the frame and lubricate with Lithium grease.
2. Fasten the lower arm to the frame using the factory hardware.
3. Slide the ball joint boot over the stud, then push the stud down through the spindle. Secure w/ the new castle nut and cotter pin supplied.

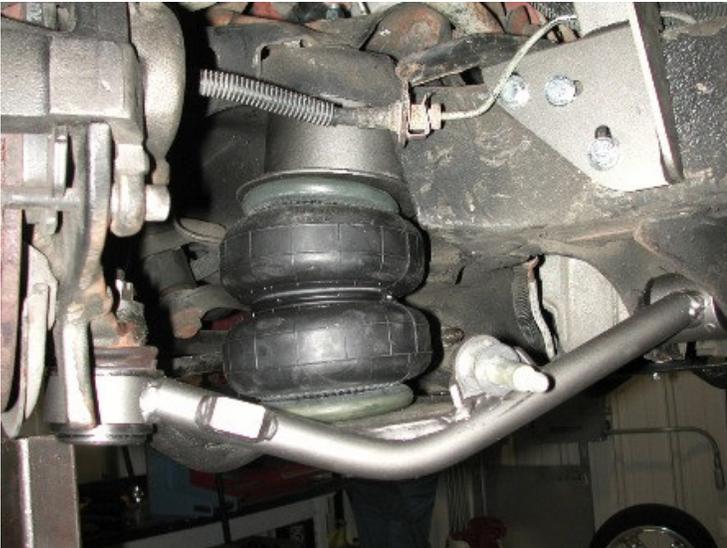

4. Attach to the air spring & shock to the lower arm using the hardware supplied w/ those kits.
5. Screw the Zerk fitting into the ball joint and grease.
6. Lubricate the frame bushings with Lithium grease.

Driver Side Lower StrongArm

Item #	Description	Qty.
1.	Driver side arm	1
2.	Ball Joint	1
3.	Inner bushing sleeve – wide	1
4.	Inner bushing sleeve – narrow	1
5.	Poly bushing half – wide	2
6.	Poly bushing half – narrow	2

